



1. ESPLED USB/UART- ( ), 1:

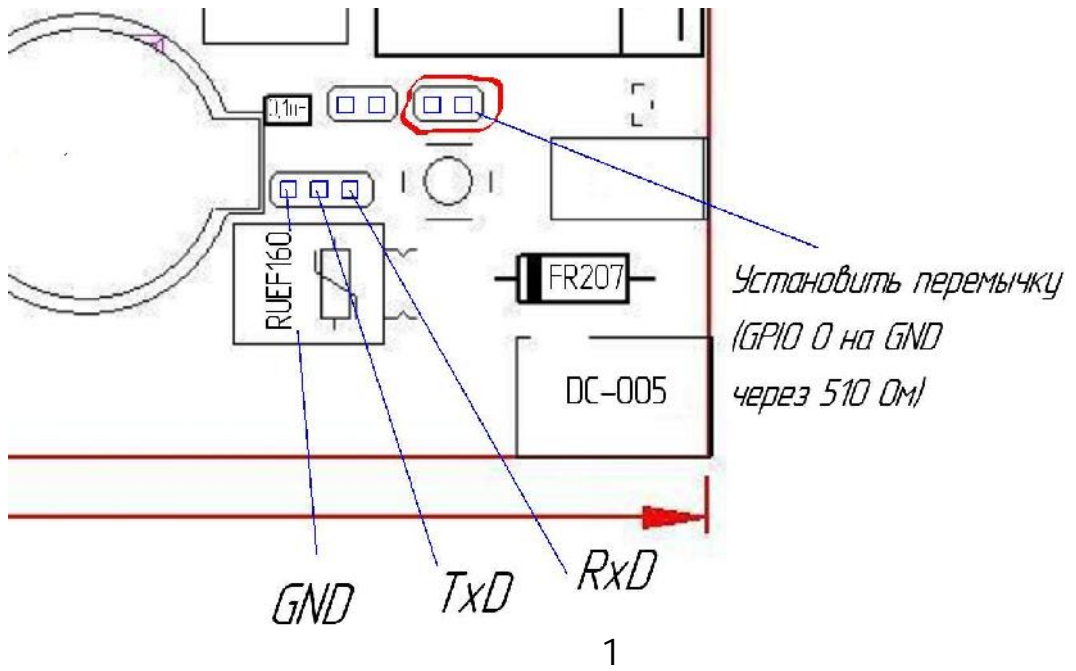

2. ESPLED

3. ESP8266Flasher, Operation COM- USB/UART ( ):

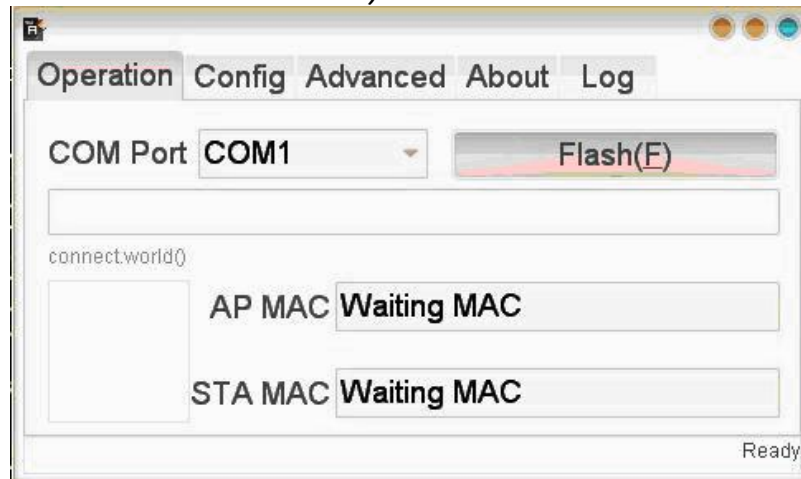


2

4. Config 2-


[www.wifi-iot.com](http://www.wifi-iot.com):

- 0x00000\_ESP8266.bin 0 00000
- 0x40000\_ESP8266.bin 0 40000

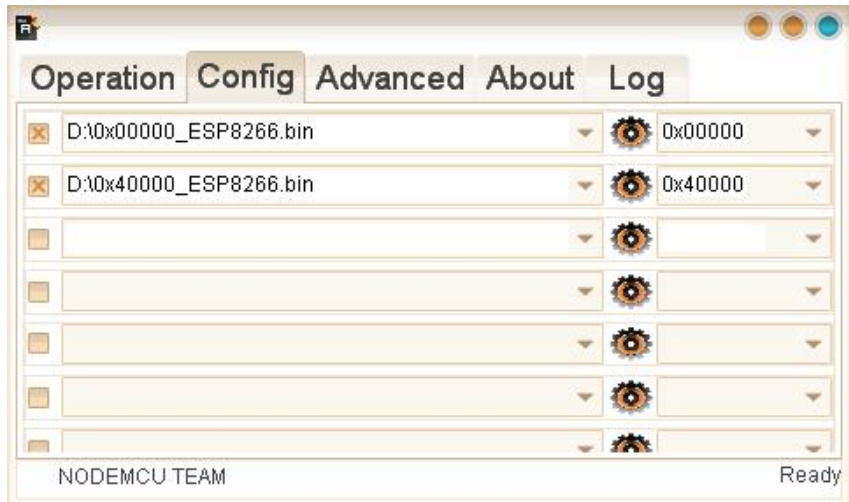


3

5.                   Advanced

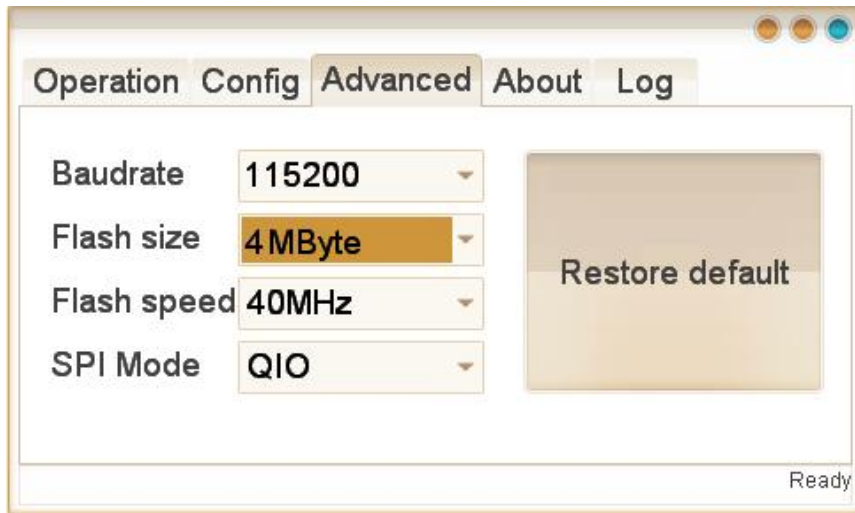

4

6.                   Operation,                   Flash (F),

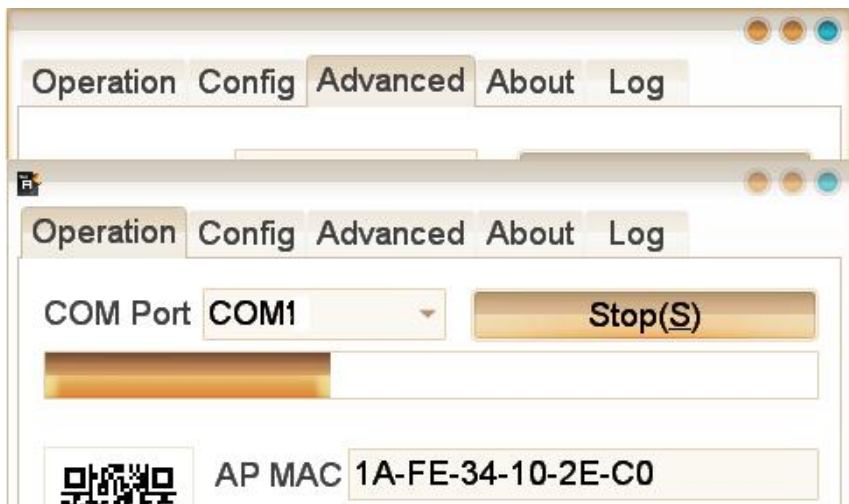

5

7.

USB/UART

8.

:

ESPLED

GPIO 0	SCL (BMP180)	GPIO 13	CLK (MAX7219)
GPIO 2	SDA (BMP180)	GPIO 14	N/C
GPIO 4	DATA (MAX7219)	GPIO 15	PULL DOWN
GPIO 5	AM2302/DS18B20	GPIO 16	PULL UP
GPIO 12	LOAD (MAX7219)		

info@espmeteo.ru

: <http://espmeteo.ru>