


ESPMeteoSmall

1.

ESPMeteoSmall USB/UART-1:

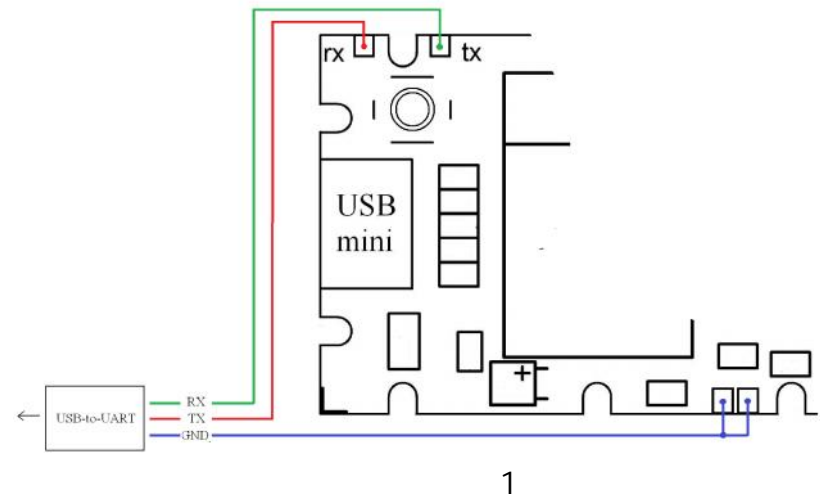

2.

ESPMeteoSmall,

USB -


3.

ESP8266Flasher,

Opera-


tion COM-
USB/UART (

):

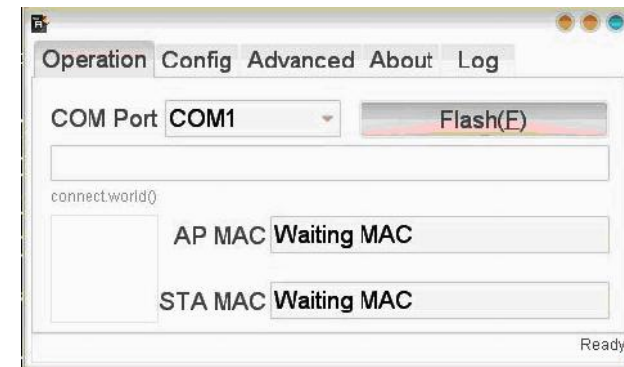


4. Config 2- www.wifi-iot.com:

- 0x00000_ESP8266.bin 0 00000
- 0x40000_ESP8266.bin 0 40000

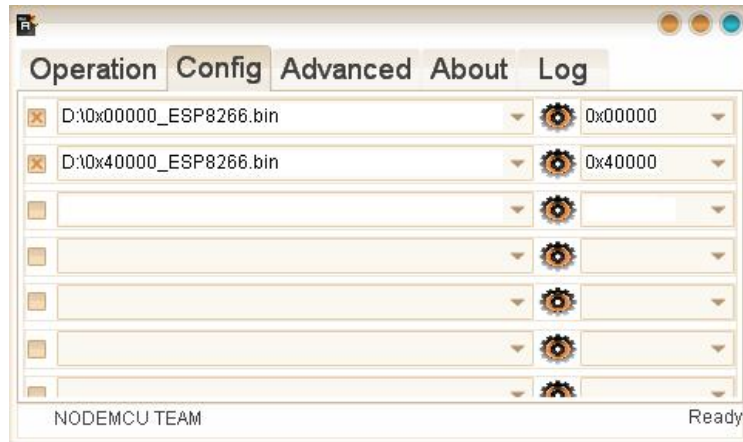


3

5. Advanced

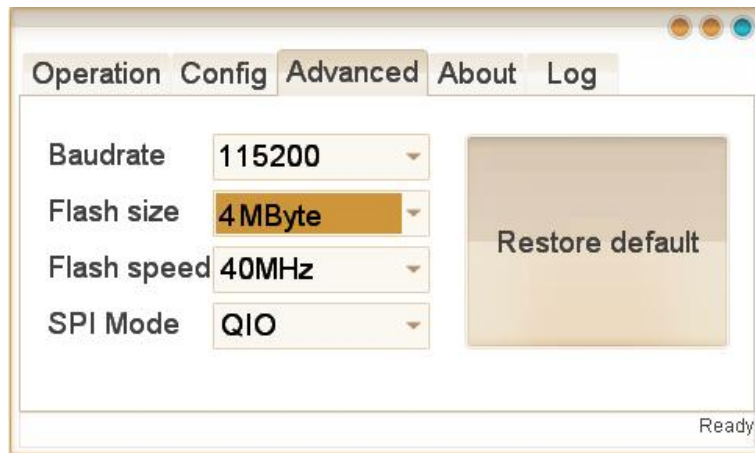

4

6. Operation, Flash (F),

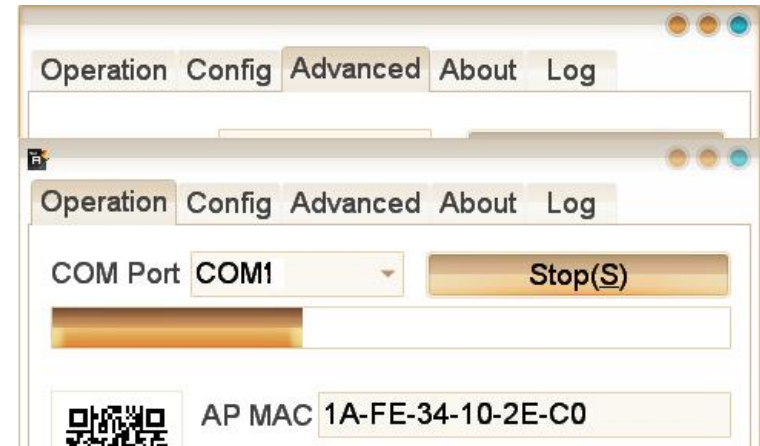

5

7.

USB/UART

8.

<http://espmeteo.ru>

info@espmeteo.ru